Source: https://www.industrydocuments.ucsf.edu/docs/

TO OPERATE:

STEP 1
PUSH CHILD-RESISTANT LATCH IN AND THEN UP.

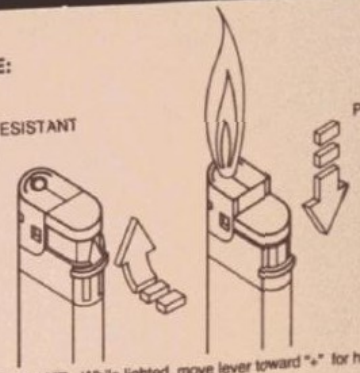

STEP 2
PUSH IGNITION LEVER DOWN TO LIGHT.

TO ADJUST FLAME: While lighted, move lever toward "+" for higher flame, toward "-" for lower flame.

FOR MAXIMUM SAFETY, KEEP CHILD-RESISTANT LATCH DOWN WHEN NOT IN USE

WARNING: READ CAREFULLY

Failure to follow instructions may result in burn injury. EXTREMELY FLAMMABLE. Do not use near fire or flame.

CAUTION: Do not puncture, incinerate or expose to temperature from sun or otherwise above 120°F. Do not attempt to refill.

KEEP OUT OF REACH OF CHILDREN. As with all lighters, hold away from face while igniting.

CAUTION: Be sure flame is extinguished after use.

KEEP OUT OF REACH OF CHILDREN

No lighter is "childproof." The child-resistant features of this lighter are no substitute for adult supervision.

GUARANTEE

Should your Scripto® lighter prove defective under normal use, return it for replacement. For an approved lighter mail bag write to Scripto-Tokai, P.O. Box 5555, Fontana, CA 92334-5555. (800) 241-8552, Ext.428.

MERIT

MERIT

2061138021

83798-B1